


# ZOKU®

## INSTRUCTION MANUAL

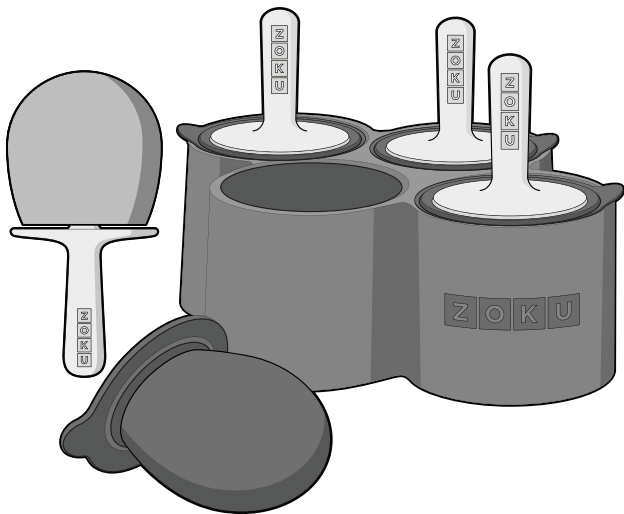

## ROUND POP MOLDS

[www.zokuhome.com](http://www.zokuhome.com)

# Important Safeguards




Please read all instructions carefully before using.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

**⚠ WARNING: THIS PRODUCT IS NOT A TOY. TO AVOID INJURY, CLOSE ADULT SUPERVISION IS NECESSARY AT ALL TIMES WHEN ANY APPLIANCE IS USED BY OR NEAR CHILDREN.**


**⚠ WARNING: CHOKING HAZARD – Breakage of the unit could produce small parts that could result in a choking hazard for small children. Keep small parts away from children under 3 years of age.**

- DO NOT MICROWAVE THE UNIT.
- DO NOT WASH IN THE DISHWASHER.
- USE CAUTION WHEN HANDLING HOT LIQUIDS.
- Do not use sharp objects or utensils inside the Zoku Round Pop Molds.
- Do not use the Zoku Round Pop Molds over flames, hot plates, or stoves, or expose to a heat source.
- Wash with mild soap only. Never clean with scouring powders or hard implements.
- After washing, dry the Zoku Round Pop Molds thoroughly before placing them in the freezer.
- Do not drop the Zoku Round Pop Molds.
- This product is intended for household use only.

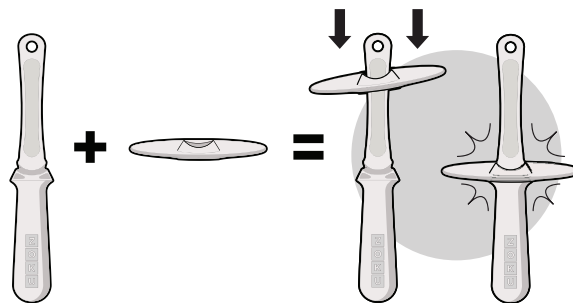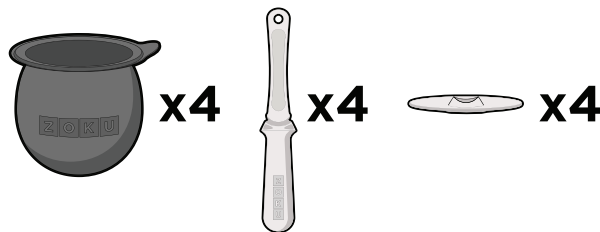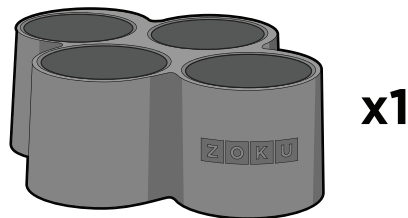


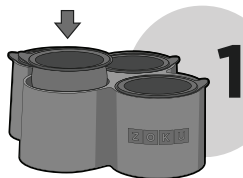



1

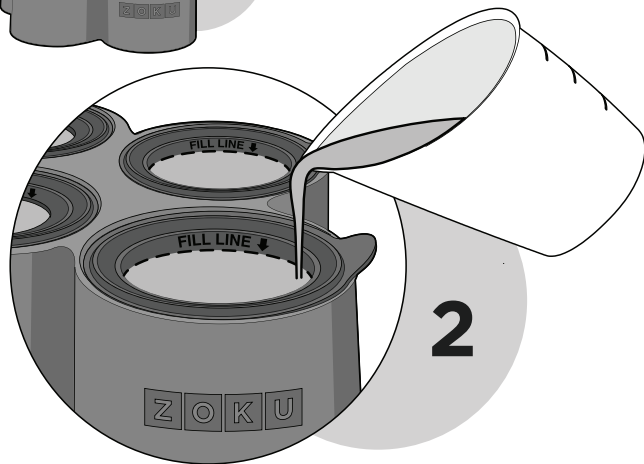


2

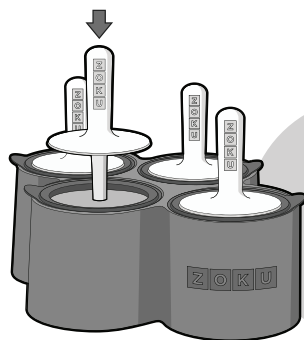

3

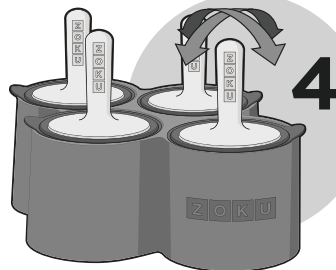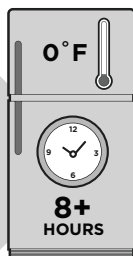


WIGGLE & PULL  
TO REMOVE

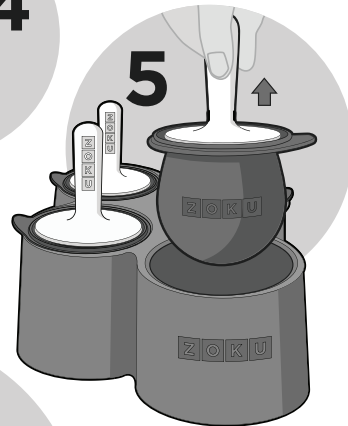

5



6


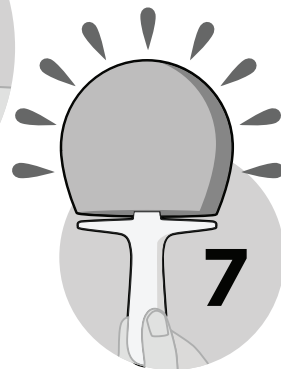


7

## Creative Tips

### Toppings & Decorations

Try topping off your pops with your favorite ice cream ingredients!

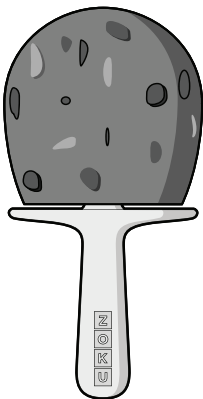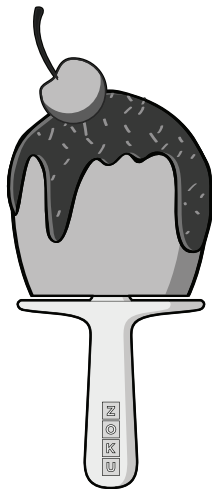

### Gourmet Pops

Try blending your favorite ingredients into your pop mix!

## Recipe Ideas

For delicious recipes & tips visit the blog on Zoku's website:  
[www.zokuhome.com](http://www.zokuhome.com)

## Troubleshooting

**Pops are difficult to remove from base.** Moisture may have frozen between the removable silicone molds and Round Pop Molds Base. Try wiggling the Round Pop Stick like a joystick before pulling. Next, allow the unit to thaw for a few minutes before trying again. You may have to rinse the underside of the base under hot water for 20–30 seconds. Be sure to dry the removable silicone molds and base completely before refreezing.

**The Round Pop Mold cavities overflowed while freezing (Round Pop Sticks 'floating' or covered in frozen liquid).** The removable silicone molds may have been overfilled. Be sure to fill no higher than indicated by the fill line. Liquids without any sugar, and liquids using artificial sweeteners expand more during freezing. Try filling the silicone molds to a level slightly lower than the fill line.


**Silicone molds don't seem to fit correctly in the base.** The removable silicone molds are most likely inside-out. You should be able to see the Zoku logo on the outside of the silicone mold.

**Drip guard detached from stick.** (See page 2 for stick assembly)

## Cleaning and Storage

**DO NOT WASH THE ZOKU ROUND POP MOLDS IN THE DISHWASHER.** Clean the Round Pop Mold Base and Round Pop Sticks with mild soap and warm water. Do not use scouring powders, pads, or hard implements. Dry the Round Pop Mold Base and Sticks completely before placing in the freezer.

# ZOKU®

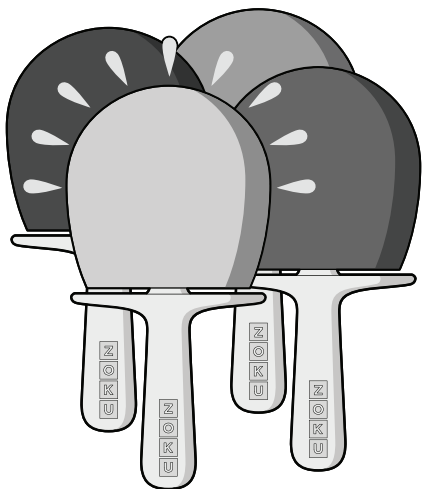

© 2013 by Zoku, LLC

**ZOKU, LLC** Hoboken, NJ 07030

[www.zokuhome.com](http://www.zokuhome.com)

All Rights Reserved.

**U.S. and International Patents Pending.**